



SINCE 1954

## PILLAR POD

### Installation Instructions

v20190409

(FG-2)

#### Important notes before installing:

- SAAS pillar pods are designed to fit **over the top** of the factory pillar trim (if fitted) and **NOT** replace the factory trim!!
- **CAUTION:** Some vehicles have air bags fitted behind the pillars and may require special tools for removal. Before you proceed refer to the vehicles service manual for correct removal procedure. It is **YOUR** responsibility to make sure the air bags (if fitted) are not obstructed in any way and function as per manufacturers specifications!
- All installation work should be done by a qualified professional to avoid damage to this product.
- This product is supplied raw and may discolour if exposed to direct sunlight for long periods. To avoid this, SAAS recommends colour matching this product to suit your vehicles interior. (See below for painting tips)

#### Fitting Steps:

- Place your new pillar pod (without gauge cups fitted) over the top of your existing pillar trim and check that it fits correctly. Some pillar pods may need slight modification to obtain a perfect fit. If modification is required a file, utility knife or sanding block can be used.
- Remove your existing pillar cover and place your new pillar pod over the top of it and mark out any holes to be cut for wiring and mounting clips.
- Fit gauge cups to pillar pod. (turn over for gauge cup assembly diagram)
- Refit your factory pillar trim and place the pillar pod over the top of it. To secure it in place, use one of the following methods.
- **Vehicles with grab handles:** To hold the pillar pod in place just screw the factory grab handle back on.
- **Vehicles without grab handles:** Fitting pillar pods to vehicles without factory grab handles can be done by using the supplied rivet clips. To fit these clips mark out where you want the clips to be fitted (usually at the top) and drill a 5mm hole through both the pillar pod and factory pillar trim making sure there is enough room behind the pillar for the clips to fit. **Note:** Rivet clips are only supplied if needed.


#### Fitting and Painting Tips:

- **Factory Speakers:** If your factory pillar trim has a speaker it must be removed or repositioned before fitting the pillar pod.
- **Fabric Wrapped Pillar Trims:** For best fitting results it is recommended to remove any fabric material from the factory pillar trim before fitting the pillar pod. This step is **optional** and up to the installer!!
- **Colour Matching steps:** Use a scotch pad to lightly scuff the surface > clean with wax and grease remover > undercoat with plastic primer > spray top colour > do not clear coat.

#### Warranty Terms & Conditions:


SAAS Automotive Pty Ltd warrants this product against defects in factory workmanship and materials for a period of twelve (12) months from the date of original purchase. This warranty applies to the first retail purchaser, is non-transferable and covers only where the product has been subjected to normal use or service. Provision of this warranty shall not apply to any SAAS Automotive product that has been used for a purpose for which it is not designed, or which has been altered in any way that would be detrimental to the performance or life of the product, or misapplication, misuse, negligence or accident. Warranty claims to the manufacturer must be transportation prepaid and accompanied with dated proof of purchase. On any part or product found to be defective after examination by SAAS Automotive Pty Ltd, SAAS Automotive Pty Ltd will only repair or replace the merchandise through the original selling dealer or on a direct basis. SAAS Automotive Pty Ltd assumes no responsibility for diagnosis, removal and/or installation labour, loss of vehicle use, loss of time, inconvenience or any other consequential expenses. The warranties herein are in lieu of any other expressed or implied warranties, including any implied warranty of suitability, and any other obligation on the part of SAAS Automotive Pty Ltd, or the selling dealer.

## Gauge Cup Assembly:

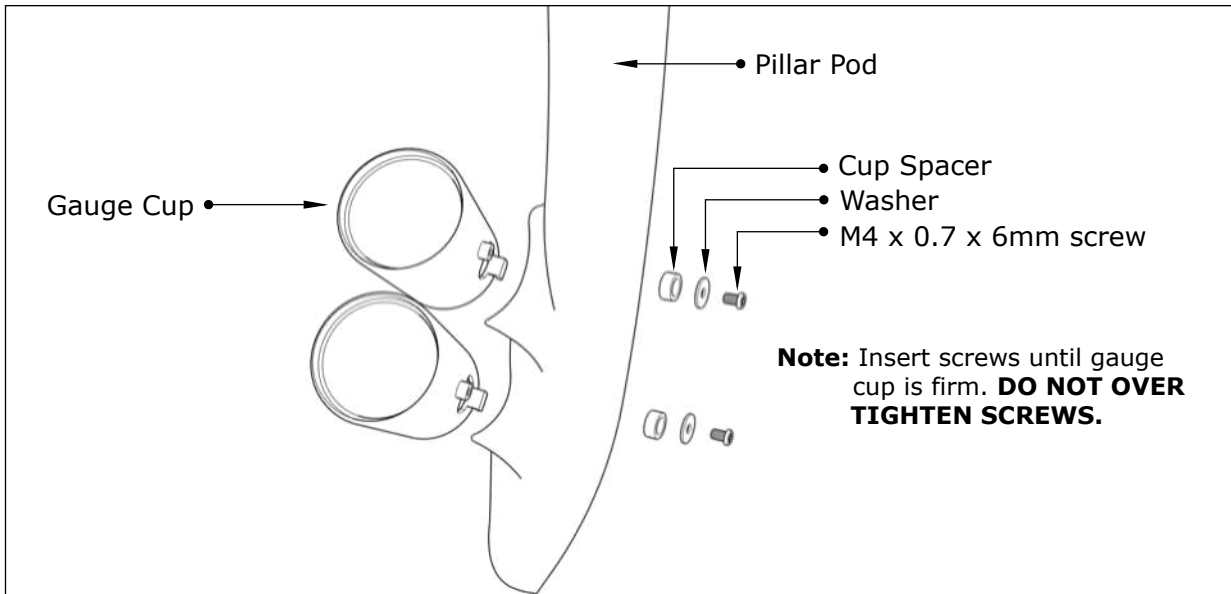

## Installing Gauges to Cups:

- The supplied o-rings (one for each gauge) are used to fit gauges to cups. The placement of the o-ring will determine how tight the gauge will sit in the cup. (refer to diagram)

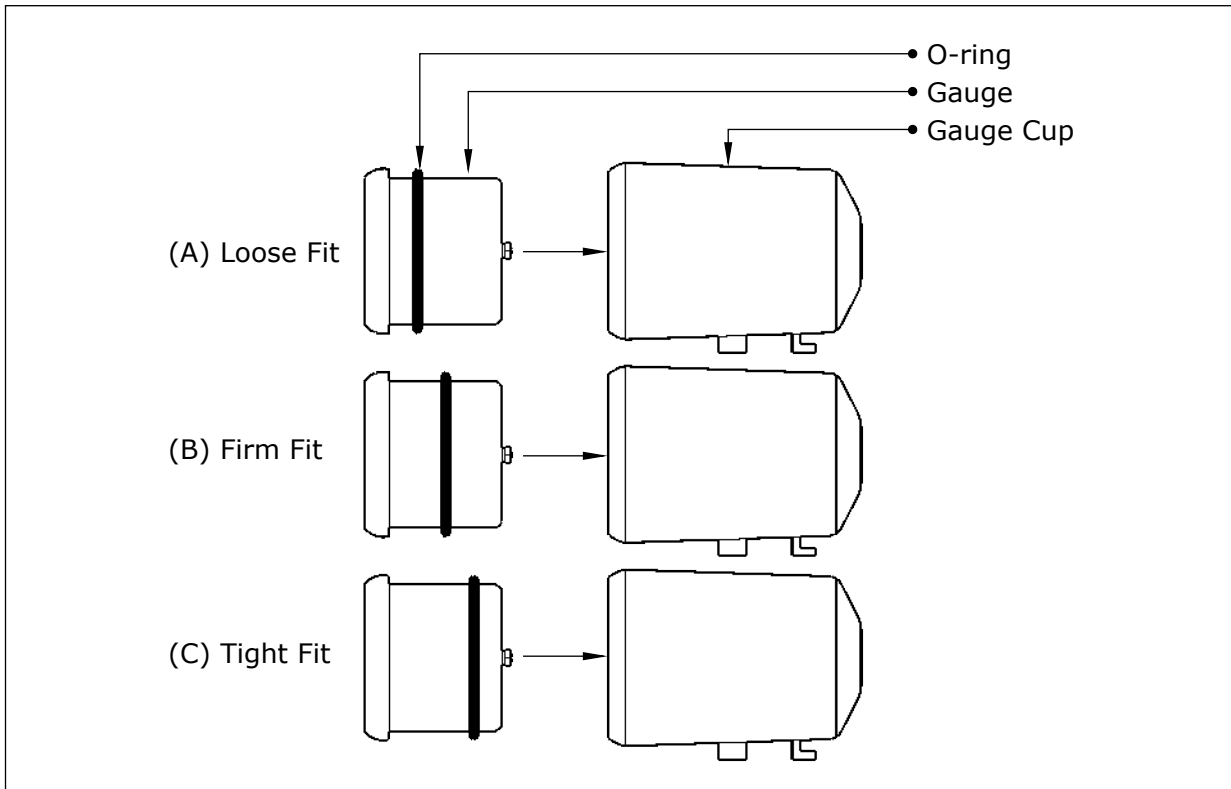

**For Further Assistance Email: [tech@saasautomotive.com.au](mailto:tech@saasautomotive.com.au)**



SINCE 1954

SAAS Automotive PTY LTD  
25 Metrolink Circuit West, Campbellfield,  
Victoria 3061 Australia  
ABN: 48166279670  
ACN: 166279670  
Phone: +61 3 9930 0100  
Fax: +61 3 8339 2270  
Email: [tech@saasautomotive.com.au](mailto:tech@saasautomotive.com.au)  
Web: [www.shopsaas.com](http://www.shopsaas.com)